

mini-cordcoiler



Installation instruction:



Attention


- • Do not open the case!
- Spring ends do not pull out by force!
- Use only cord with a diameter of 4 to 4.5mm. Drawcord: Small drawcord (5101) at Ø 4mm = approx. 4,5m and at Ø 4,5mm = approx. 3,75m, large drawcord (5301) at Ø 4mm = approx. 5,3m and at Ø 4,5mm = approx. 4,25m.
- Do not use too stiffes cord.
- Do not use too much extra cord on the pulley in the roller shutter (approx. 1 turn).
- Screw the coiler to the frame or to the wall.

 Lengthen the cord in a way that when the roller shutter is down 10 to

 20cm cord remains in the coiler.

20cm cord remains in the coner.			
1	Insert the cord into the cut of the spring so that the cord is pointing upwards approx. 2cm.	5	The molten head must not be too large, it must only rise slightly above the feather.
2	Press the cord in the narrow area of the spring-cut.	6	Only then pull out the spring end with the cord and hang out the locking tabs. Caution : spring is under tension - risk of injury!
3	Cut the end of the cord with scissors or a sharp side cutter so that its end stick about 5mm above the spring.	7	Insert the cord under the lever into the coiler.
4	Weld the end of the cord with a lighter and allow it to cool.	8	Push the lever very far down, slide the cord into the coiler (possibly lift the lever over the cord again until the spring pulls the cord into the coiler).

Pull out the cord:

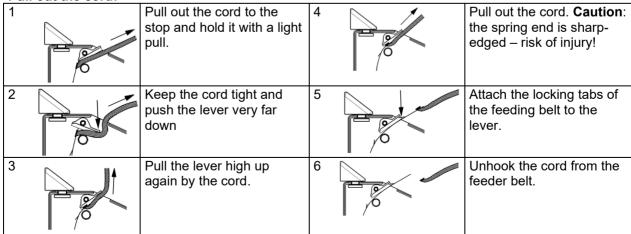



SIRAL Rolladen- und Sicherheitssysteme GmbH, Hundsberger Str. 21, D 73642 Welzheim, Tel. +49/7182/92770, Telefax 927755, info@siral.de